

CHIMERA

Dhydra's Patented Rapid Low Temperature Dehydration (RLTD)



SPECIFICATIONS

Dehydration Rate Up to 46lb/hr (21kg/hr)
**Capacity varies depending on the density and moisture of the product*

Cycle Time 30 - 45 min

Number of Trays (Full Chamber) Dries 13 trays per drying cycle


Process Type Batch process

Automated Cleaning Process Clean-in-place (CIP) system is activated by a push of a button and does not require disassembly
**CIP suggested before changing strains*

Moisture Reduction ~80% wet to ~10% dry (~4% dry for extraction)
**Exact moisture level can be specified based on user preferences*

Maximum Output (RF) Nominally rated at 25kW (9 magnetrons @ 3kW each)

Electrical Power Requirements 480V 3ph+N 25A per phase
400V 3ph+N 50A per phase

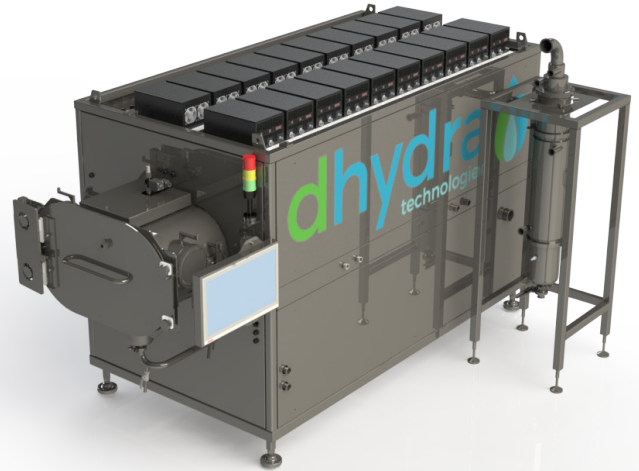

PROCESSING QUALITY

Rapid drying prevents mold proliferation
Drying in a vacuum results in virtually no oxidization
Dark conditions eliminates degradation from light
Low temperature preserves cannabinoids

- RLTD gently removes moisture in as little as 30 minutes producing a product that is shelf-stable and ready for sale
- Preserves plant integrity (e.g. fragrance, colour) using RLTD closed loop system
- Depending on the program being run, terpenes are either retained in the bud or collected in the water recovery system
- Intuitive computer control systems combined with 10,000's of sensor reading every minute, allows the machine to self-regulate and achieve uniform drying results without requiring technical staff on site
- Remote access troubleshooting services available
- Modular components for easy maintenance
- Data logins for compliance and diagnostics

CONTACT US

FILL OUT AN ONLINE FORM
TO GET STARTED

dhydra.com/contact

info@dhydratech.com | 604-566-8338

FOLLOW US FOR OUR LATEST UPDATES



@DHYDRATECH

SYSTEM REQUIREMENTS


- Drainage: floor drain
- Relative humidity (environment): dry conditions required in the packaging room; users determine humidity level
- Heat exchange system (chiller): available from Dhydra or can be customer supplied
- Internet connection: requires at least 1MBps
- Continuous monitoring by customer on-site via HMI

CERTIFICATIONS & APPROVALS

- Health Canada approved chemicals for CIP
- Electrical safety approved by LabTest Certification Inc. to CSA standards
- EU-GMP compliant RLTD System (in progress)
- ISO 9001 certified quality management system (in progress)
- Sanitation SOP
- Pass/Fail swab test

DIMENSIONS

Full system weight 2,041kg 4,500lb

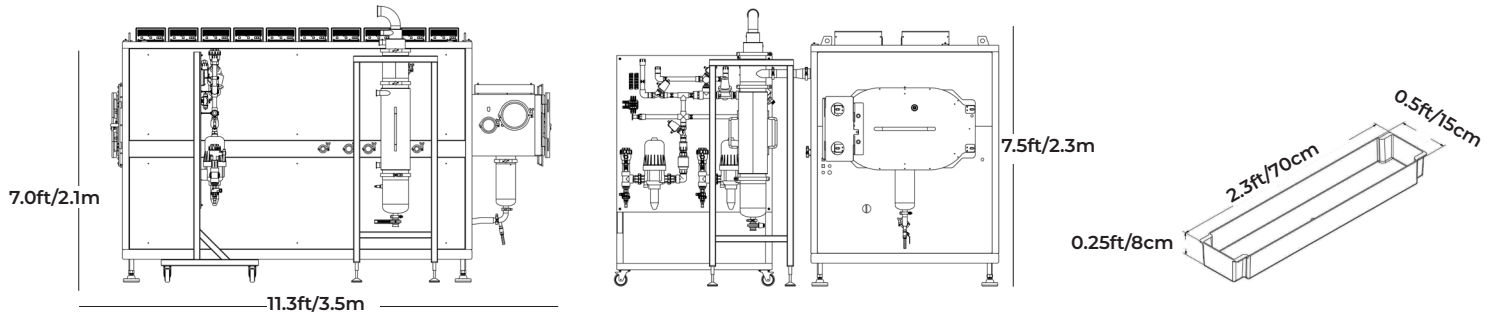

ROOM LAYOUT

